 
 


**EKEN<sup>®</sup> H9R**

# THE BASICS

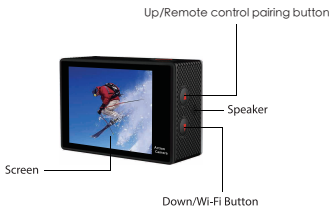

# ACCESSORIES

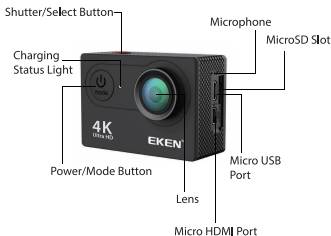

Waterproof  
Housing



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Frame



Handle Bar/  
Pole Mount



Helmet Mounts



Protective  
Backdoor



Battery



Tethers



USB Cable



Remote  
(Optional)

---

# MOUNTING YOUR CAMERA

---

Attach your camera to helmets, gear and equipment.



---

## GETTING STARTED

---

To power ON:

Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.







---

## OVERVIEW

---

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings.

---

	Video	Record Video
	Photo	Capture a single photo
	Burst Photo	Capture photo bursts
	TL Video	Shoot a series of videos at setted time intervals
	TL Photo	Shoot a series of photos at setted time intervals
	Settings	Adjust camera settings, resolution and more.

---

---

## SETTINGS

---

- \* Repeatedly press the Power/Mode Button to get to Settings.
- \* Press the Shutter/Select Button to enter the settings menu.
- \* Repeatedly press the Power/Mode Button to cycle through options.
- \* Press the Shutter/Select Button to select desired option.

---

## VIDEO MODE

---



### Video

To record Video, verify the camera is in Video mode.

#### **To start recording:**

Press the Shutter/Select Button. The camera will emit one beep and the Camera Status Light will flash while recording.

#### **To stop recording:**

Press the Shutter/Select Button. The Camera Status Lights stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your video will be saved before the camera powers OFF.

---

## PHOTO MODE

---



### Photo

To capture a Photo, verify the camera is in Photo mode.

#### **To take a photo:**

Press the Shutter/Select Button. The camera will emit the camera shutter sound.

### **\*To take Burst Photo or Time Lapse Video/Photo:**

- \* Repeatedly press the Power/Mode Button to cycle through camera modes and settings.
- \* Find Burst/TL Video/TL Photo, and press the Shutter/Select Button to select them.
- \* Press Shutter/Select Button to take Burst photos/ Time Lapses Videos.

---

## **PLAYBACK**

---

### **Playing Back Video and Photo**

#### **To enter the playback menu:**

1. Repeatedly press the Power/Mode Button to cycle through camera modes and settings.
2. Find Video/Photo, and press the Shutter/Select Button to enter Video Playback/Photo Playback.
3. Press Power/Mode Button to cycle through the Video/Photo files.
4. Press Shutter/Select Button the play.
5. Press Power/Mode Button to return to Video/Photo list.
6. Press Up Button to exit.

---

## **STORAGE/MICROSD CARDS**

---

This camera is compatible with 16GB to 64GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with at least Class 10 speed rating. We recommend using original branded memory cards for maximum reliability in high-vibration activities.

---

## BATTERY

---

### To charge the battery

Please use 5V1A USB charger and USB cable to charge the camera.

Charging time: around 5 hours.

---

## CAMERA APP

---

### Connecting to the Ez iCam APP

The Ez iCam APP lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of selected content and more.

1. Download the Ez iCam APP to your smartphone or tablet at the Google Play or Apple APP Store.
2. Press the Power/Mode Button to power camera ON.
3. Make sure the camera is in Camera mode.
4. Press the Down/Wi-Fi Button to turn on Wi-Fi\*.
5. In your smartphone or tablet's Wi-Fi list, connect to the network called " iCAM-HgR " followed by a series of numbers.
6. Open the Ez iCam APP on your smartphone or tablet.  
Then you can control your camera through App.

\* Press and hold the Down/Wi-Fi Button for three seconds to turn OFF Wi-Fi




iOS / Android  
App Download



---

## REMOTE (Optional)

---

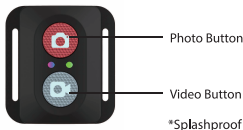

### Please follow the steps to pair the remote control with the camera before use:

1. Switch the camera to video mode.
2. Press and hold the Up Button on camera for 3 seconds, then it will enter pairing mode.
3. Press the red button on remote control, then it will pair successfully.

\* Please note, after each reset of camera, it will request to pair with remote control when you start the camera again.

### Video

To record Video, verify the camera is in Video mode.

#### **To start recording:**

Press the Grey Video Button. The camera will emit three beeps and the Camera Light will flash while recording.

#### **To stop recording:**

Press the Grey Video Button again. The Camera Light will stop flashing.



## Photo

To capture a Photo, verify the camera is in Photo mode.

### **To take a photo:**

Press the Red Photo Button. The camera will emit camera shutter sound.

\* Burst/Time Lapse: Verify the camera is in the mode you want, press the Red Photo Button to take a Burst/Time Lapse.

### **\* To power OFF camera:**

Press and hold the Red Photo Button.

### **How change batteries for Remote Control:**

- \* Remove the 2 screws in back cover
- \* Exchange with 2pcs AAA batteries. Please make sure to put the batteries in correct direction. Wrong direction may damage the remote control.
- \* Mount the cover back and screw back in.